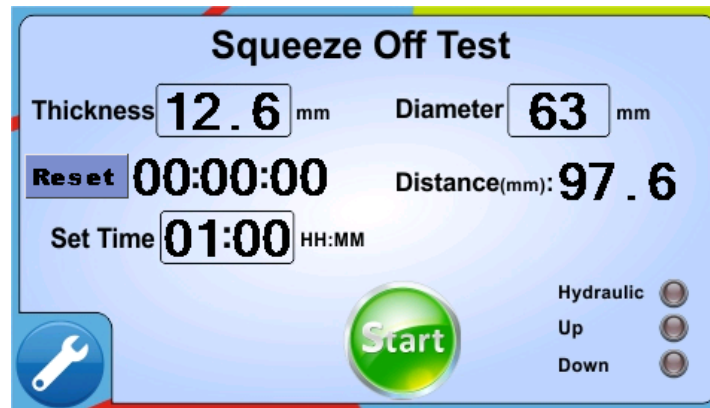

Squeeze Off Instruction

When connected to power and the power switch is turned on, the front control panel of the device lights up, and the operating system starts running. After the operating system fully loads and the system is ready for operation, the following screen is displayed.

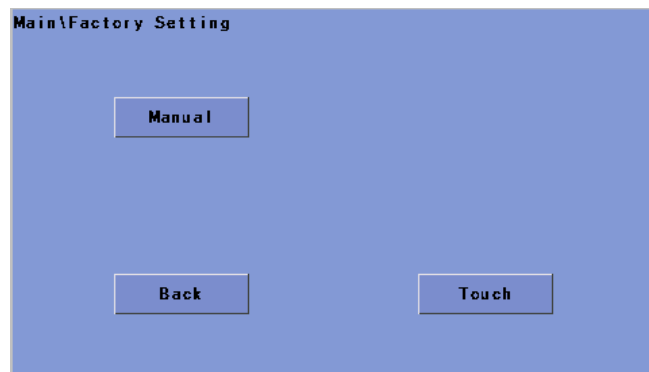


In the displayed menu:

- **Thickness:** Pipe thickness in millimeters.
- **Diameter:** Pipe diameter in millimeters.
- **Distance:** Distance between plates in millimeters.
- **Set Time:** Test duration specified by the operator.

At the bottom right of the screen, the status of the valves and hydraulic pump is displayed, indicating whether they are active or inactive.

After entering the required test parameters, press the **Start** button to initiate the test. To access the settings menu, tap the icon located at the bottom left of the screen.



The settings menu consists of two main sections:

- **Touch:** This menu is for calibrating the device's display screen, with settings configured by the manufacturer and locked for the operator.

- **Manual:** This menu is for activating or deactivating the solenoid valves and hydraulic pump when the test is paused.

